

NO:S2DZDN70GSV0

Barcode Scanner User Guide

V1.0



Enter

This User manual is quick start manual. For detailed manual information, please download the completed user manual from our website or obtain it from our distributor.

Factory Default



System Setting:

1. Scan "Start" Code;
2. Scan needed settings function's code;
3. Scan "End" Code.

Example: Scanner setting as "Factory Default", add suffix "CR".

1. Enter



2. CR



3. Exit



Exit



Enter

Communication Interfaces



USB HID-KBW



USB-COM



USB-POS



RS232 serial port

Image Invert



ON



OFF

Scanning Mode



Manual



Auto-Sense



Continuous



Exit



Enter

Beep Volume



Low



Medium



High

Keyboard Language



USA



Italy



France

Case Convert



NONE



Uppercase



Lowercase



Exit



Enter

Suffix Setting



Suffix--CR



Suffix--CRLF

USB-COM、RS232 Baud Rate Setting



4800



9600



19200



38400



57600



115200

Bar Code Enable and Disable Setting



Disable all Barcodes



Enable all Barcodes



Exit



Enter



Enable Code 128



Disable Code 128



Enable AIM 128



Disable AIM 128



Enable EAN-8



Disable EAN-8



Enable EAN-13



Disable EAN-13



Enable ISSN



Disable ISSN



Enable ISBN



Disable ISBN



Exit



Enter



Enable UPC-E



Disable UPC-E



Enable UPC-A



Disable UPC-A



Enable Interleaved 2 of 5



Disable Interleaved 2 of 5



Enable ITF-6



 
Disable ITF-6



Enable ITF-14



Disable ITF-14



Enable Codabar



Codabar



Exit



Enter



Enable Matrix 2 of 5



Disable Matrix 2 of 5



Enable Standard 25



Disable Standard 25



Enable Code 39



Disable Code 39



Enable Code 93



Disable Code 93



Enable Code 11



Disable Code 11



Enable MSI-Plessey



Disable MSI-Plessey



Exit