 











<p>Start</p> 	<p>Factory Default</p> 	<p>2D Scanning Platform User Guide</p> <p>NO:S2DZDN70GV0</p>
<p>Upper Case</p> 	<p>Low Case</p> 	<p>NO Case</p> 
<p>Exchange Case</p> 	<p>USB-HID</p> 	<p>USB-COM</p> 

<p>Enter&Line</p> 	<p>Enter</p> 	<p>RS-232</p> 
<p>Buzzer ON</p> 	<p>Buzzer OFF</p> 	<p>Image Inverse Color ON</p> 
<p>Image Inverse Color OFF</p> 	<p>End</p> 	<p>System Setting:</p> <ol style="list-style-type: none"> 1. Scan "Start" Code 2. Scan needed settings function' s code 3. Scan "End" Code <p>Example:Scanner setting as "Factory Default"</p> <ol style="list-style-type: none"> 1. Scan "Start" Code 2. Scan "Factory Default" Code 3. Scan "End" Code